

INDEX

	Paragraphs	Pages		Paragraphs	Pages
Accumulator air pressure check (<i>See</i> Hydraulic pumping unit, test station)			Corrective maintenance (<i>See</i> Maintenance)		
Accumulator, equilibrator and surge, air servicing (<i>See</i> Launcher)			Delay line driver-detector (<i>See</i> Flight simulator group)		
Allocation, maintenance.....	32	47	Distribution box, power, launching control trailer:		
Amplifier-decoder, replacement (<i>See</i> Flight simulator group)			Circuit breakers, replacement..	47	60
Axle, mobile launcher			Maintenance, corrective.....	43	57
Brake system air bleed.....	29b	44	Downlock limit switch checks and adjustments (<i>See</i> Launcher, limit switch checks and adjustments)		
Brake system drain and flush....	29a	43	Equipment.....	6	6
Hydraulic brake adjustment.....	28a	42	Equipment manual improvements, reporting of.....	3	3
Parking brake adjustment.....	28b	42	Filter element, replacement (<i>See</i> specific item)		
Caution:			Filter, inspection and maintenance (<i>See</i> specific item)		
Adequate support must be placed.....	21b, 22b(21)	29 32	Flight simulator control unit (<i>See</i> Launching-control console)		
Do not allow the hydraulic pumping unit motor.....	18b, 18c(3)(f), 18c(6)(a), 18d(3)(d), 20d, 20a, 21n	18 20 21 22 23 25	Flight simulator group:		
Do not leave the air-exhaust door in the closed position....	11b(3)(b)	8	Amplifier-decoder, replacement..	40	54
Do not loosen the coupling screw.....	12g(4)	10	Delay line driver-detector:		
Do not operate the section simulator group.....	15a(2)	14	Installation.....	34c	47
Do not raise the launcher.....	26c(2)	38	Removal.....	34b	47
Do not twist the lens.....	14, 16	13, 15	Filters, air conditioning, corrective maintenance.....	36	43
Ground the chuck.....	37a(2)	49	Maintenance, corrective.....	33	47
If the oil level does not indicate..	22b(1), 23b(1)	30 35	Pulse delay network:		
Safety device assemblies must be secured.....	21a, 22b(4)	24 31	Installation.....	38d	53
To prevent accidental collapse of a jack.....	27	40	Removal.....	38a	52
To prevent warping of the launcher base.....	27	40	Pulse transfer relay, replacement.....	35	43
Circuit breakers, replacement (<i>See</i> Distribution box, power, launching control trailer)			Radar modulator:		
Control-indicator, launcher:			Installation.....	38c	52
Filter:			Removal.....	38b	52
Air-exhaust, inspection and maintenance.....	17b	16	Rectifying crystal unit, replacement.....	37	49
Air-intake, inspection and maintenance.....	17a	16	Signal data converter, HERCULES, replacement.....	42	56
Indicator lights, HEAT MONITOR, adjustment.....	16	15	Test set:		
Timer:			Installation.....	34d	47
Checks.....	30.1	46	Removal.....	34a	47
			Tube, electron:		
			Magnetron, 6229, replacement.....	41	55
			Thyratron, 2D21W, replacement.....	39	54
			Forms.....	2	3
			Gyro-preset system alignment—ac loop, manual and automatic (<i>See</i> Section selector, launching)		
			Gyro-preset system alignment—dc loop, manual (<i>See</i> Section selector, launching)		
			Hydraulic oil drain and flush (<i>See</i> Launcher)		

	Paragraphs	Pages		Paragraphs	Pages
Hydraulic pumping unit, test station:			Power supply, -28v, replacement (See Launching-control console)		
Accumulator air pressure check	24	36	Preventive maintenance (See Maintenance)		
Filter element, replacement	51	62	Pulse delay network (See Flight simulator group)		
Maintenance, corrective	50	62	Pulse transfer relay, replacement (See Flight simulator group)		
Indicator lights, HEAT MONITOR, adjustment (See specific item)			Radar modulator (See Flight simulator group)		
Hydraulic system air bleed (See Launcher)			Records	2	3
Launcher:			Rectifying crystal unit, replacement (See Flight simulator group)		
Accumulator, equilibrator and surge, air servicing	25	38	Repair parts (See Parts, repair)		
Filter elements, replacement	49	61	Reports	2	3
Hydraulic oil drain and flush	21	23	Scope of manual	1	3
Hydraulic system air bleed	22	30	Section selector, launching:		
Leveling checks and adjustments	26	38	Filter, air-intake:		
Limit switch checks and adjustments:			Cleaning	15b	15
Downlock	19	22	Installation	15c	15
Uplock	20	23	Recharging	15b	15
Wedglock	18	18	Removal	15a	14
Maintenance, corrective	48	61	Gyro-preset system alinement:		
Launcher control-indicator (See Control-indicator, launcher)			Ac loop, manual and automatic	12	9
Launcher, mobile, leveling checks and adjustments	27	40	Dc loop, manual	13	12
Launching-control console:			Indicator lights, HEAT MONITOR, adjustment	14	13
Flight simulator control unit:			Servicing and adjustments:		
Installation	45b	58	General	7	7
Removal	45a	57	Requirements	8	7
Location and access procedures	44	57	Signal data converter, AJAX (See Launching-control console)		
Maintenance, corrective	43	57	Signal data converter, HERCULES, replacement (See Flight simulator group)		
Power supply, -28v, replacement	46	59	Stop-and-positioning latch adjustments	30	44
Signal data converter, AJAX:			Table:		
Installation	45d	59	Leveling shims (table 1)		39
Removal	45c	59	Test stations hydraulic lines:		
Launching-control group:			Air bleed	23b	35
Filter:			Flush	23a	34
Air-exhaust, inspection and maintenance	11b	8	Tools	6	6
Air-intake, inspection and maintenance	11a	8	Tube, electron (See Flight simulator group)		
Lightning protector plugs check	10	7	Uplock limit switch checks and adjustments (See Launcher, limit switch checks and adjustments)		
Launching section selector (See Section selector, launching)			Warning:		
Leveling shims (table 1)	26c(4)	39	Exercise caution in relieving pressure	24c(6)	37
Lightning protector plugs check (See Launching control group)			Injury to personnel may result	49a,	62
Lubrication	9	7		51a	62
Maintenance:			Insure that all pressure is bled	24c(5)	37
Corrective	31	47	Insure that the pressure in the air supply hose has been relieved	24c(1)	36
(See also specific item)			Launcher control-indicator contains voltages	16, 16d	15, 16
Preventive	9	7			
Maintenance allocation (See Allocation, maintenance)					
Mobile launcher axle (See Axle, mobile launcher)					
Modification work orders	4	3			
Parts, repair	5	6			

APPENDIX I

REFERENCES

Refer to TM 9-1400-250-10 or TM 9-1400-250-10/2 for a listing of publication indexes, administrative publications, forms and records publications, supply publications, and NIKE technical manuals.

Next page is 69.

APPENDIX II

ABBREVIATIONS

This appendix lists all the abbreviations and their meanings used in this TM.

ac -----	alternating current	in-id -----	inch-inside diameter
APS -----	accessory power supply	in-od -----	inch-outside diameter
ATTN -----	attention	LO -----	lubrication order
C.G. -----	Commanding General	MWO -----	modification work order
DA -----	Department of the Army	No. -----	number
dc -----	direct current	ORD -----	Ordinance (publication titles)
e.g. -----	for example	par. -----	paragraph
etc. -----	and so forth	psi -----	pounds per square inch
fig. -----	figure	RCDC -----	radar course directing central
fil -----	fillister	rd-hd -----	round-head
fl -----	flat	SM -----	supply manual
fl-hd -----	flat-head	TB -----	technical bulletin
hex. -----	hexagon	TM -----	technical manual
hex-hd -----	hexagon-head	TO&E -----	Table of Organization and Equipment
HPU -----	hydraulic pumping unit	tr -----	truss
in. -----	inch	U.S. -----	United States
		v -----	volt

	Paragraphs	Pages		Paragraphs	Pages
Launcher erecting beam will descend.....	21b _n , 22b(24)	30 32	Remove the data transmission cable.....	12j(1)	11
Launching control console contains voltages.....	44, 45a, 46a	57 59	Section control-indicator contains voltages.....	14, 14d	13
Make certain the mobile launcher axle is properly secured.....	29	43	Voltages are present inside the section selector.....	12	9
Make sure the MAIN POWER BRKR switch is set to OFF	16g	16	Weight the air supply hose.....	24c(2)	37
Power distribution box contains voltages.....	47	60	Wedglock limit switch checks and adjustments (See Launcher, limit switch checks and adjustments)		

By Order of the Secretary of the Army:

HAROLD K. JOHNSON,
General, United States Army,
Chief of Staff.

Official:

J. C. LAMBERT,
Major General, United States Army,
The Adjutant General.

Distribution:

To be distributed in accordance with DA Form 12-32, Section II (Unclass) requirements for NIKE-HERCULES and Improved NIKE HERCULES—TM—Ground Handling, Support and Service Equipment.

U.S. GOVERNMENT PRINTING OFFICE: 1972-752-863/92