

Synchro
MONROE

ADDING and ACCOUNTING MACHINES
for Integrated Data Processing

Item Numbers	54-M-15900-100
	54-M-210-100

INTEGRATED
DATA PROCESSING

REPAIR and MAINTENANCE
RENTALS

SYNCHRO MONROE

Adding Machines

Item No. 54-M-15900-100

In conjunction with Item Nos. 54-M-4795, 54-M-4796-300, and 54-M-4796-350

<i>Description</i>	<i>Price each</i>	<i>Excise Tax</i>	<i>Price with Tax</i>
Synchro-Monroe unit for punching tape with any Series 400 Simplex Monroe Adding Machine. Add to cost of base machine.....	\$ 913.50.....	\$60.90.....	\$ 974.40
Synchro-Monroe unit for punching tape with any Series 400 Grand Total Adding Machine. Add to cost of base machine.....	958.50.....	63.90.....	1022.40
Synchro-Monroe card control unit with any Series 400 Adding Machine. Add to cost of base machine.....	1035.00¶.....	69.00.....	1104.00
Synchro-Monroe unit for punching tape with any Series 200 Adding Machine. Add to cost of base machine.....	1125.00.....	75.00.....	1200.00
Synchro-Monroe card control unit with any Series 200 Adding Machine. Add to cost of base machine.....	1035.00¶.....	69.00.....	1104.00

¶Price does not include card punch which must be rented or bought by the purchaser from a manufacturer of tabulating equipment.

Item No. 54-M-15900-100 Continued

Attachments and Special Features for Synchro-Monroe Adding Machines

<i>Description</i>	<i>Feature No.</i>	<i>Price each</i>	<i>Excise Tax</i>	<i>Price with Tax</i>
Alphabetic punching: To punch single letter symbols as letters into 5-channel tape only. Requires an adjacent blank keyboard column. Each column (not including type bar or keytops).....	A4	\$ 90.00.....	\$6.00.....	\$ 96.00
Channel code, 6, 7, or 8.....	A1	45.00.....	3.00.....	48.00
Codes, functional: To program any operating keys except total key to punch functional code. Each key.....	A6	45.00.....	3.00.....	48.00
Codes, functional: To provide a separate live key to punch a functional code. Each key	A7	45.00.....	3.00.....	48.00
Each additional sequential code.....		22.50.....	1.50.....	24.00
Codes, functional, keyboard entry: A row of nine keys with special type bar so functional codes may be selected and punched from operating key depression; 5-channel tape only. Available codes: LT, letters; SP, space; TB, tab; ST, stop; BL, bell; —, hyphen; CR, carriage return; LF, line feed; FG, figures. Each column (including type bar and keytops).....	A8	112.50.....	7.50.....	120.00
Field control, fixed: All operating keys are programmed to punch the full capacity of the machine. To program an operating key to punch only a fixed number of digits to fill in a field.....	A10.....	45.00.....	3.00.....	48.00
Eliminate from left to right.....		45.00.....	3.00.....	48.00
Eliminate from right to left.....		90.00.....	6.00.....	96.00
Eliminate from both directions.....				
Field control, variable: A 10-position switch. If set at 6, only six digits will punch from operating bars; if set at 3, only three digits will punch from operating bars, etc. Also available to eliminate punching to right.....	A11.....	81.00.....	5.40.....	86.40
Overdraft identification: To provide a character code identification on credit balance total	A3	45.00.....	3.00.....	48.00
Punching control: All operating control keys punch. To eliminate control key punching. Each key.....	A2	22.50.....	1.50.....	24.00
Rewind mechanism, for the punched tape (Series 200 only).....	A13.....	13.50.....	.90.....	14.40
Zero suppression: To program operating keys so only digits entered on keyboard will punch with no zeros to the left; also available suppressing zeros to the right.....	A9	76.50.....	5.10.....	81.60
Zero suppression with space codes punching: Space codes will automatically punch at left of digits punched, to full capacity of machine.....	A12.....	90.00.....	6.00.....	96.00

for integrated data processing



Model 410-11-011-P
for punching 5-channel tape

With its almost unlimited flexibility, the Synchro-Monroe offers a fast and accurate means of compiling figures for subsequent repetitive use. It operates as a regular adding machine and as amounts are printed on standard adding machine paper or wide forms, it automatically punches in a tape as a by-product all printed items or selected ones, coding them as non-add, add, subtract, and total. This common language tape controls the automatic operations for typewriting, card punching, transmission by wire, or other processing.



Summary of Features Synchro-Monroe prepares tape in 5-channel code, punching with following identifications: Minus bar, *space hyphen space*; non-add key, *space quotation mark space*. Total key punches functional codes for carriage return, line feed, and figures. Plus bar and sub-total key punch with no identification. On-and-off switch controls punching from plus and minus bars. Error key punches 2 and 5 code. Tape feed key advances tape. Switch with pilot light disengages operation of punching unit. Machine operates on AC current only.

Model 410-22-092-G
direct-to-card punching

